


# Anchorpoint T

Version 0, 2022-02-10.

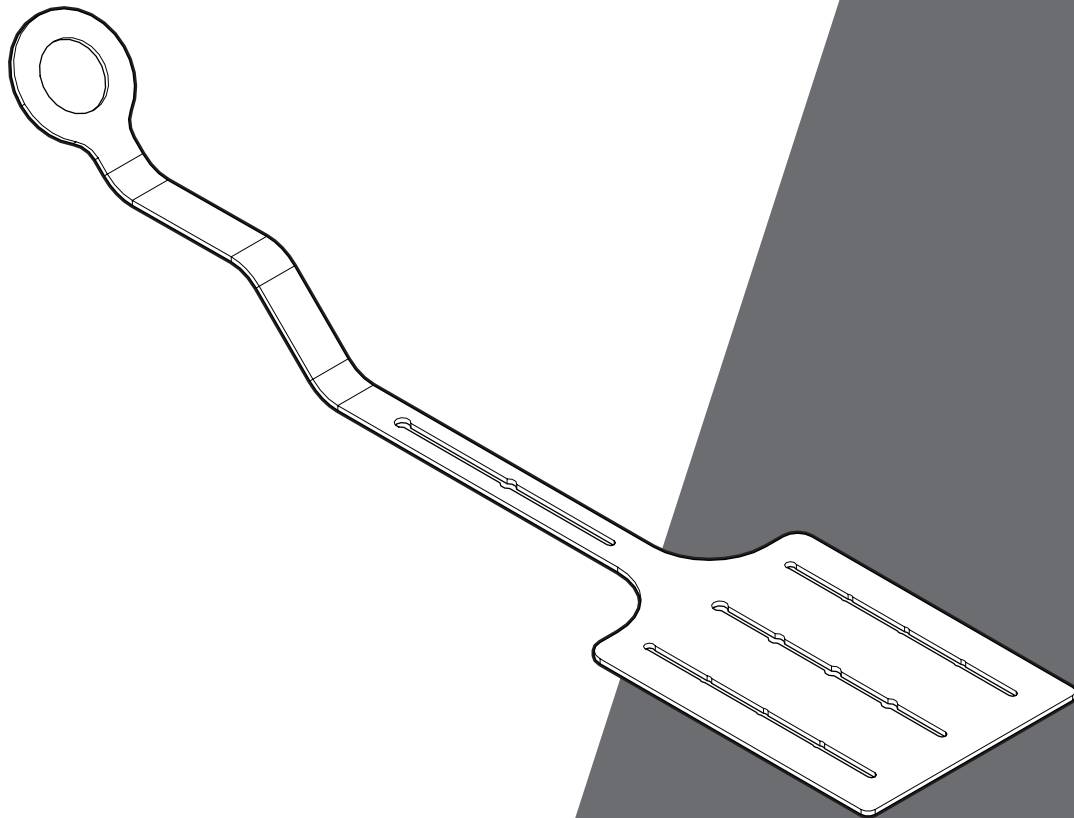

ROOF/AC

**Installation Instructions**

# 1. Safety – read this before installing the Anchorpoint T

## Warnings


- ⚠ **WARNING.** A person who installs the Anchorpoint T must know the EU and local regulations regarding personal fall protection equipment, PPE, if it is being used together with Anchorpoint T. If a person who installs the Anchorpoint T does not know the regulations regarding PPE, there is a risk of incorrect use of the PPE. If a person uses PPE incorrectly, there is a risk of personal injury or death.
- ⚠ **WARNING.** Always read the Anchorpoint T installation instruction before installation. If the person who installs the Anchorpoint T instruction has not read the Anchorpoint T installation instruction, there is a risk of incorrect installation. If installed incorrectly, there is a risk of personal injury or death.
- ⚠ **WARNING.** Only install the Anchorpoint T together with appropriate screws. If the Anchorpoint T is not properly installed with appropriate screws, there is a risk of the Anchorpoint T coming loose from the surface to which it is attached. If the Anchorpoint T comes loose from the surface to which it is attached, there is a risk of personal injury or death.

## 2. Installation instructions


### ⚠ Before installation.

- » Make sure that the Anchorpoint T (A) is not damaged.


1. To install the Anchorpoint T (A) on the desired location (B) the bricks (C) and (D) must first be removed.

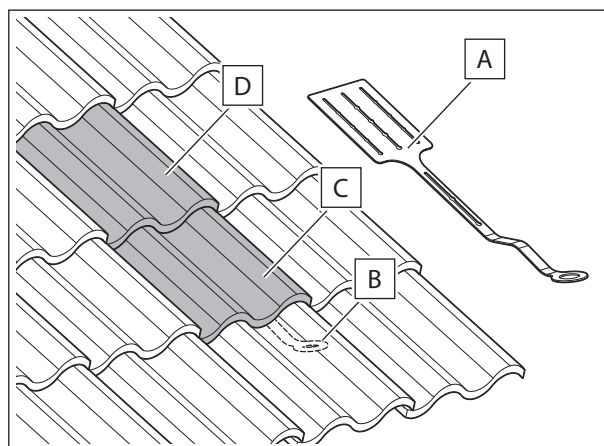

2. Remove the brick (C) and put it aside.
3. Push the brick (D) up under the brick in above.

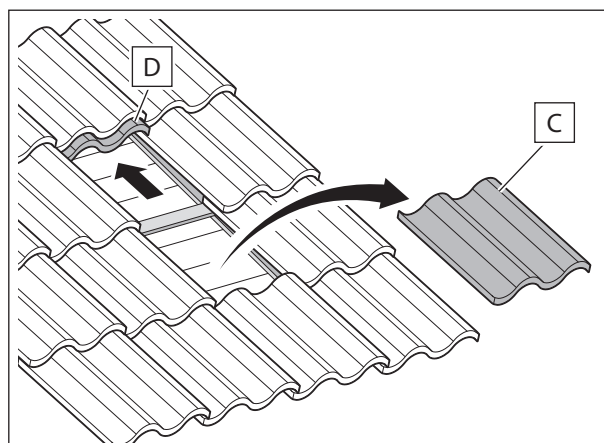


- Put the Anchorpoint T (A) in under the crossbar (E).

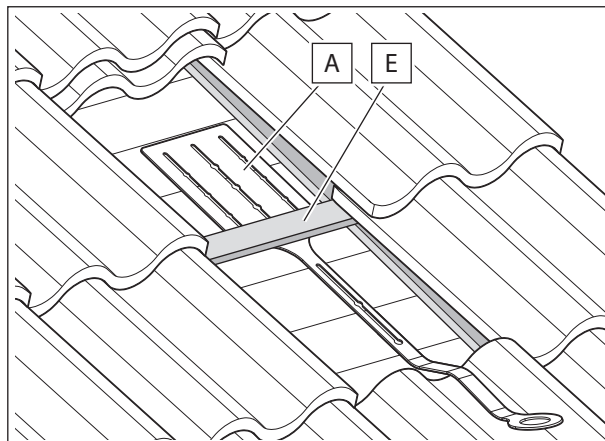


- Use 14 metal roofing screws, 6x40 mm (F) in the 6,5 mm holes and the 8 mm holes to attach the Anchorpoint T (A) to the wood panel (G) on the roof. Use 12 screws on the upper part and 2 screws on the neck of the Anchorpoint T (A).

For attaching the Anchorpoint T (A) to tongue-in-groove board, use the same screws, 6x40 mm (F) and the same setup.

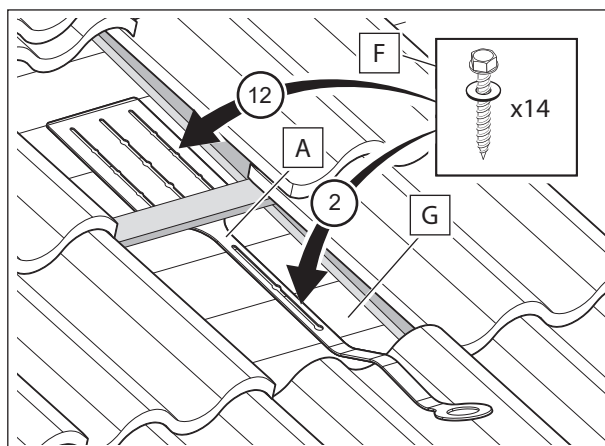

- Put the removed bricks (C) and (D) back over the Anchorpoint T (A).

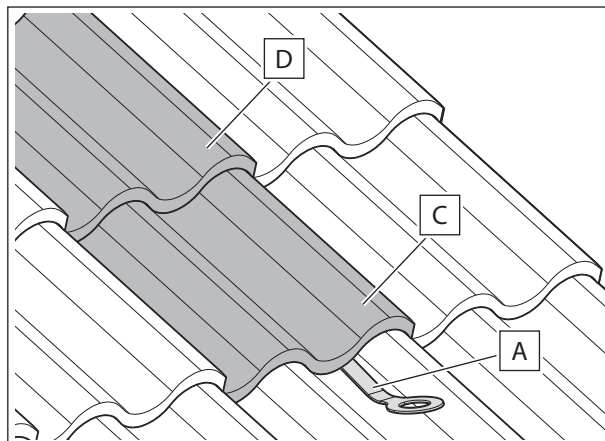

## Alternative installation on roof truss

- Use six truss screws, 6x40 mm (H) in the 8 mm holes to attach the Anchorpoint T (A) to the roof truss (I).

